


DE Montageanleitung
FR Notice de montage
GB Installation instructions
CZ Montážní návod

SCREEN PRO

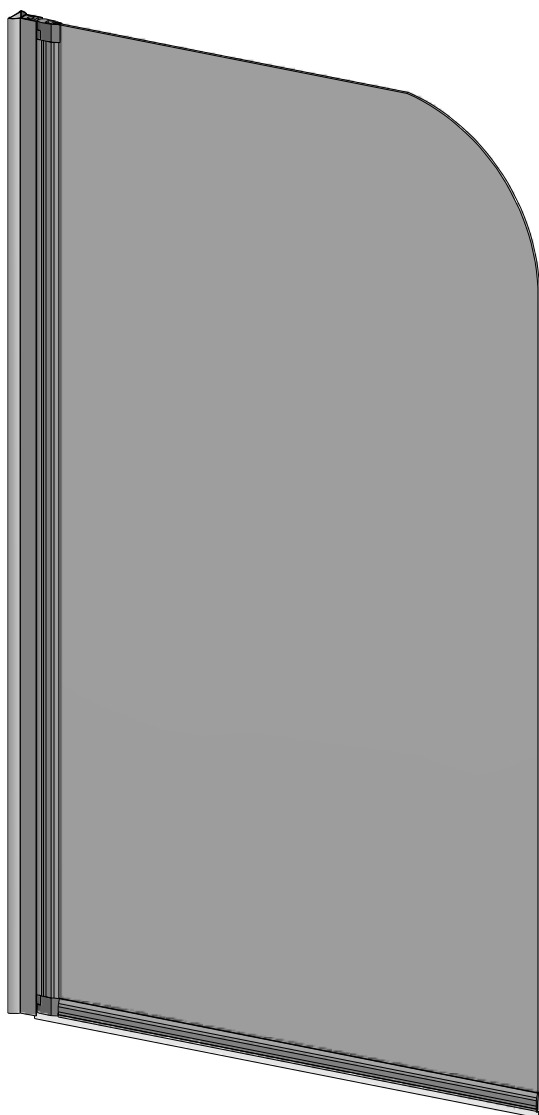


1. 1x



2. 1x
ND01-3308-2AE



4. 3x
Ø6
M0511

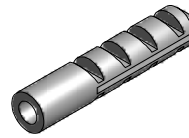


5. 3x
Ø3,5x32
M0794



6. 3x
Ø3,5x11
M0806



7. 3x
M0669

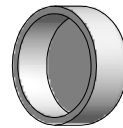


8. 3x



9. 1x
M0838
n2,8





3. 1x
ND01-3297

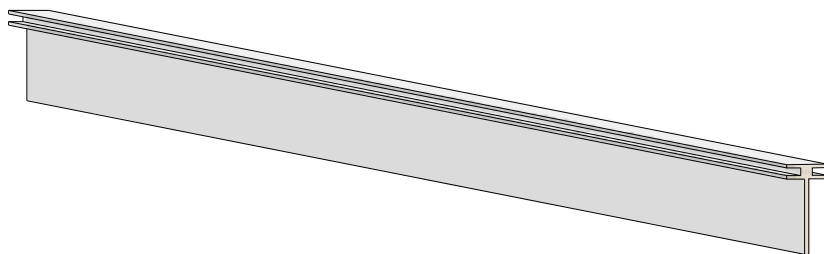


TOOL



A

2.

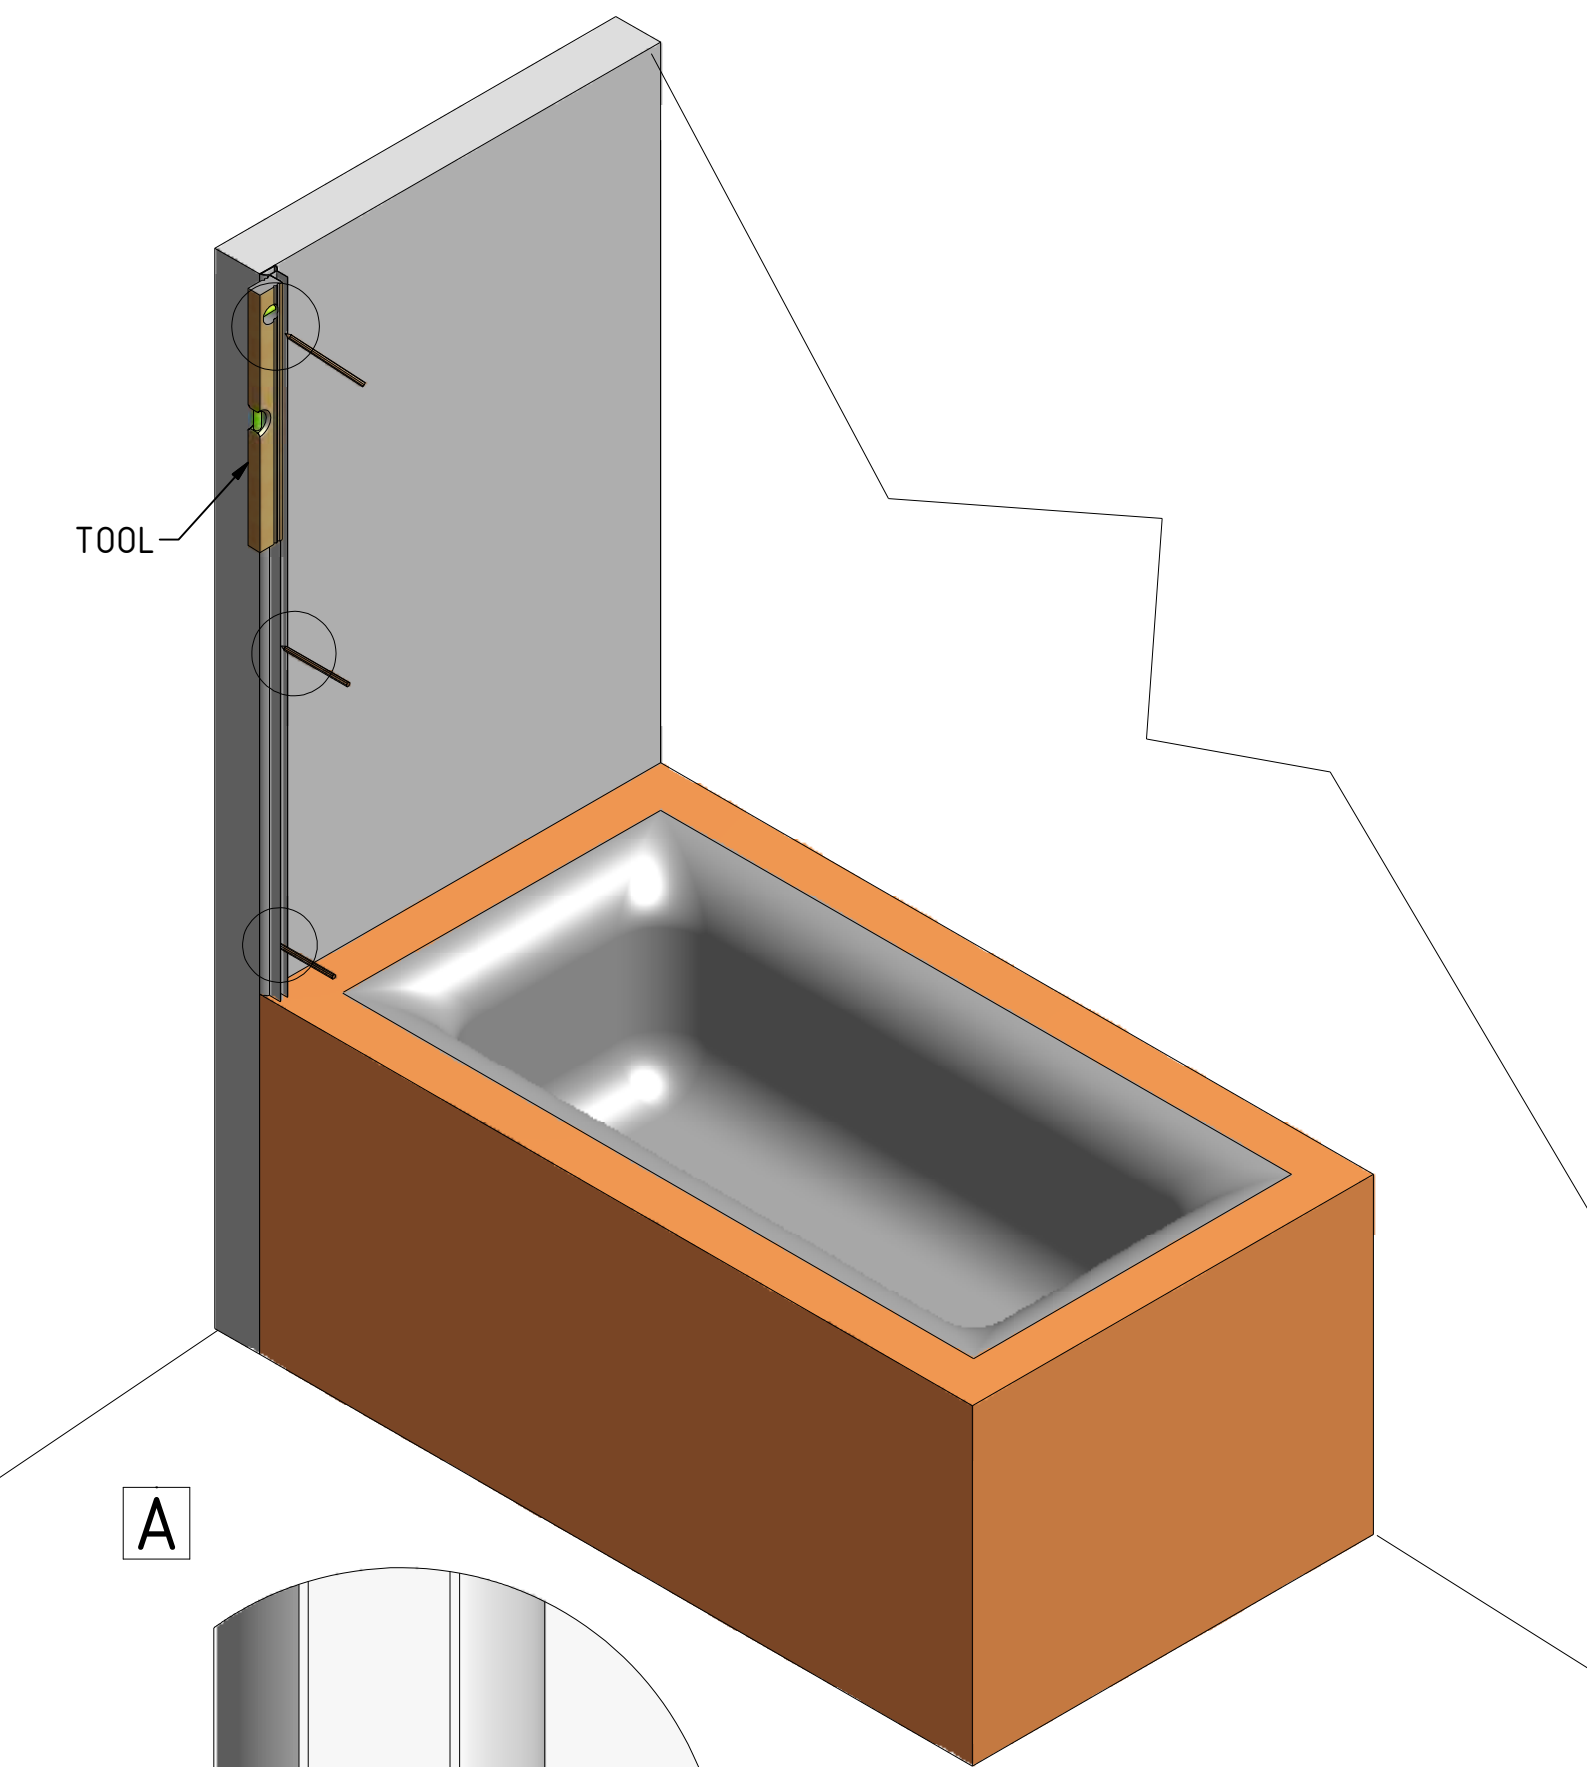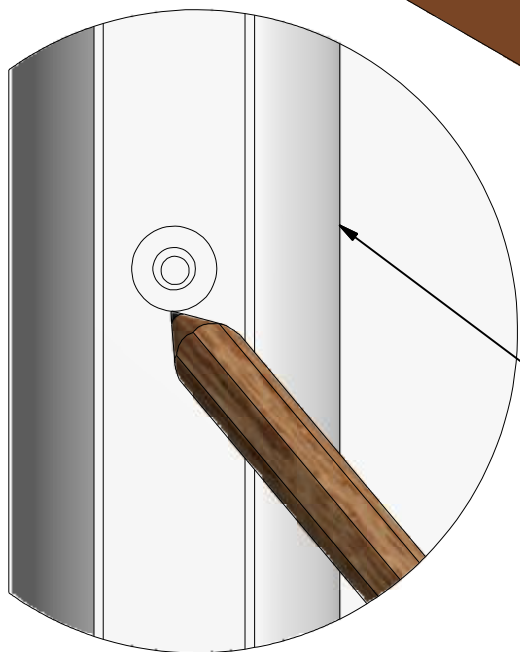

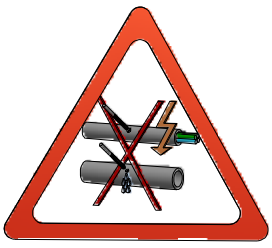


B 3x

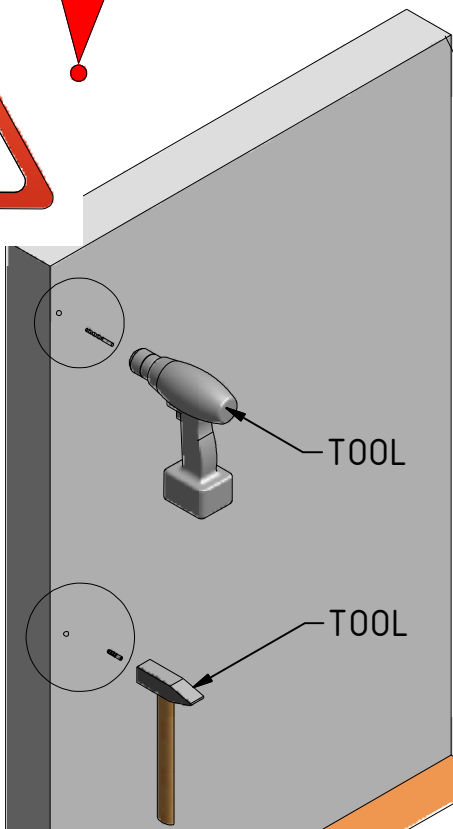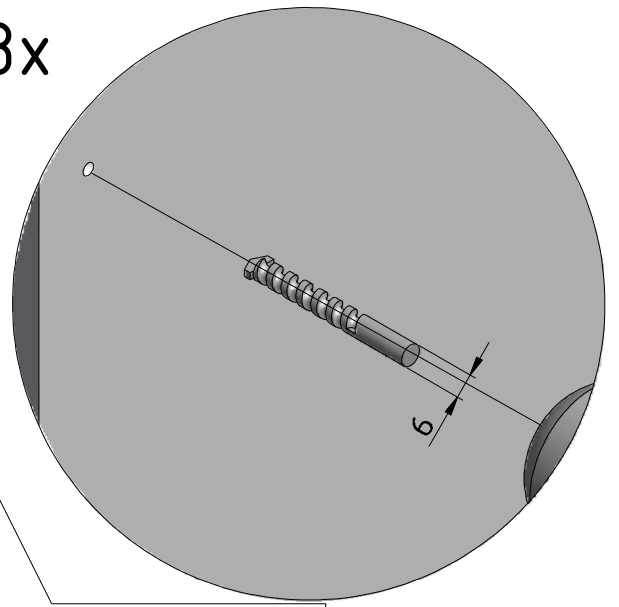


TOOL



TOOL

C 3x

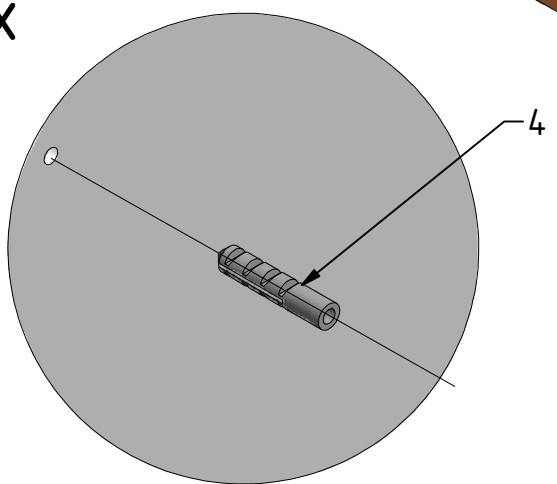



D 3x

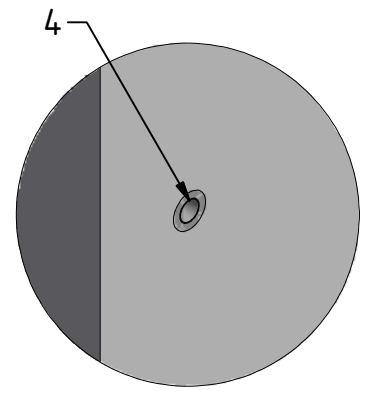

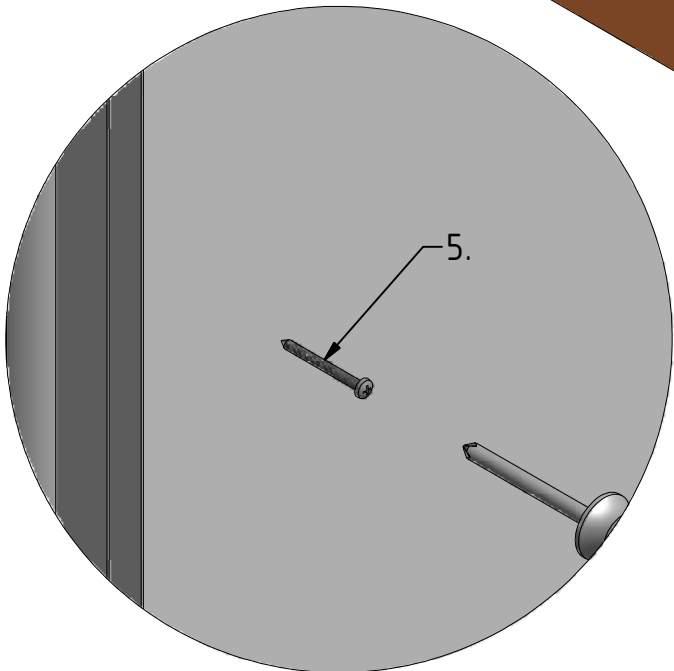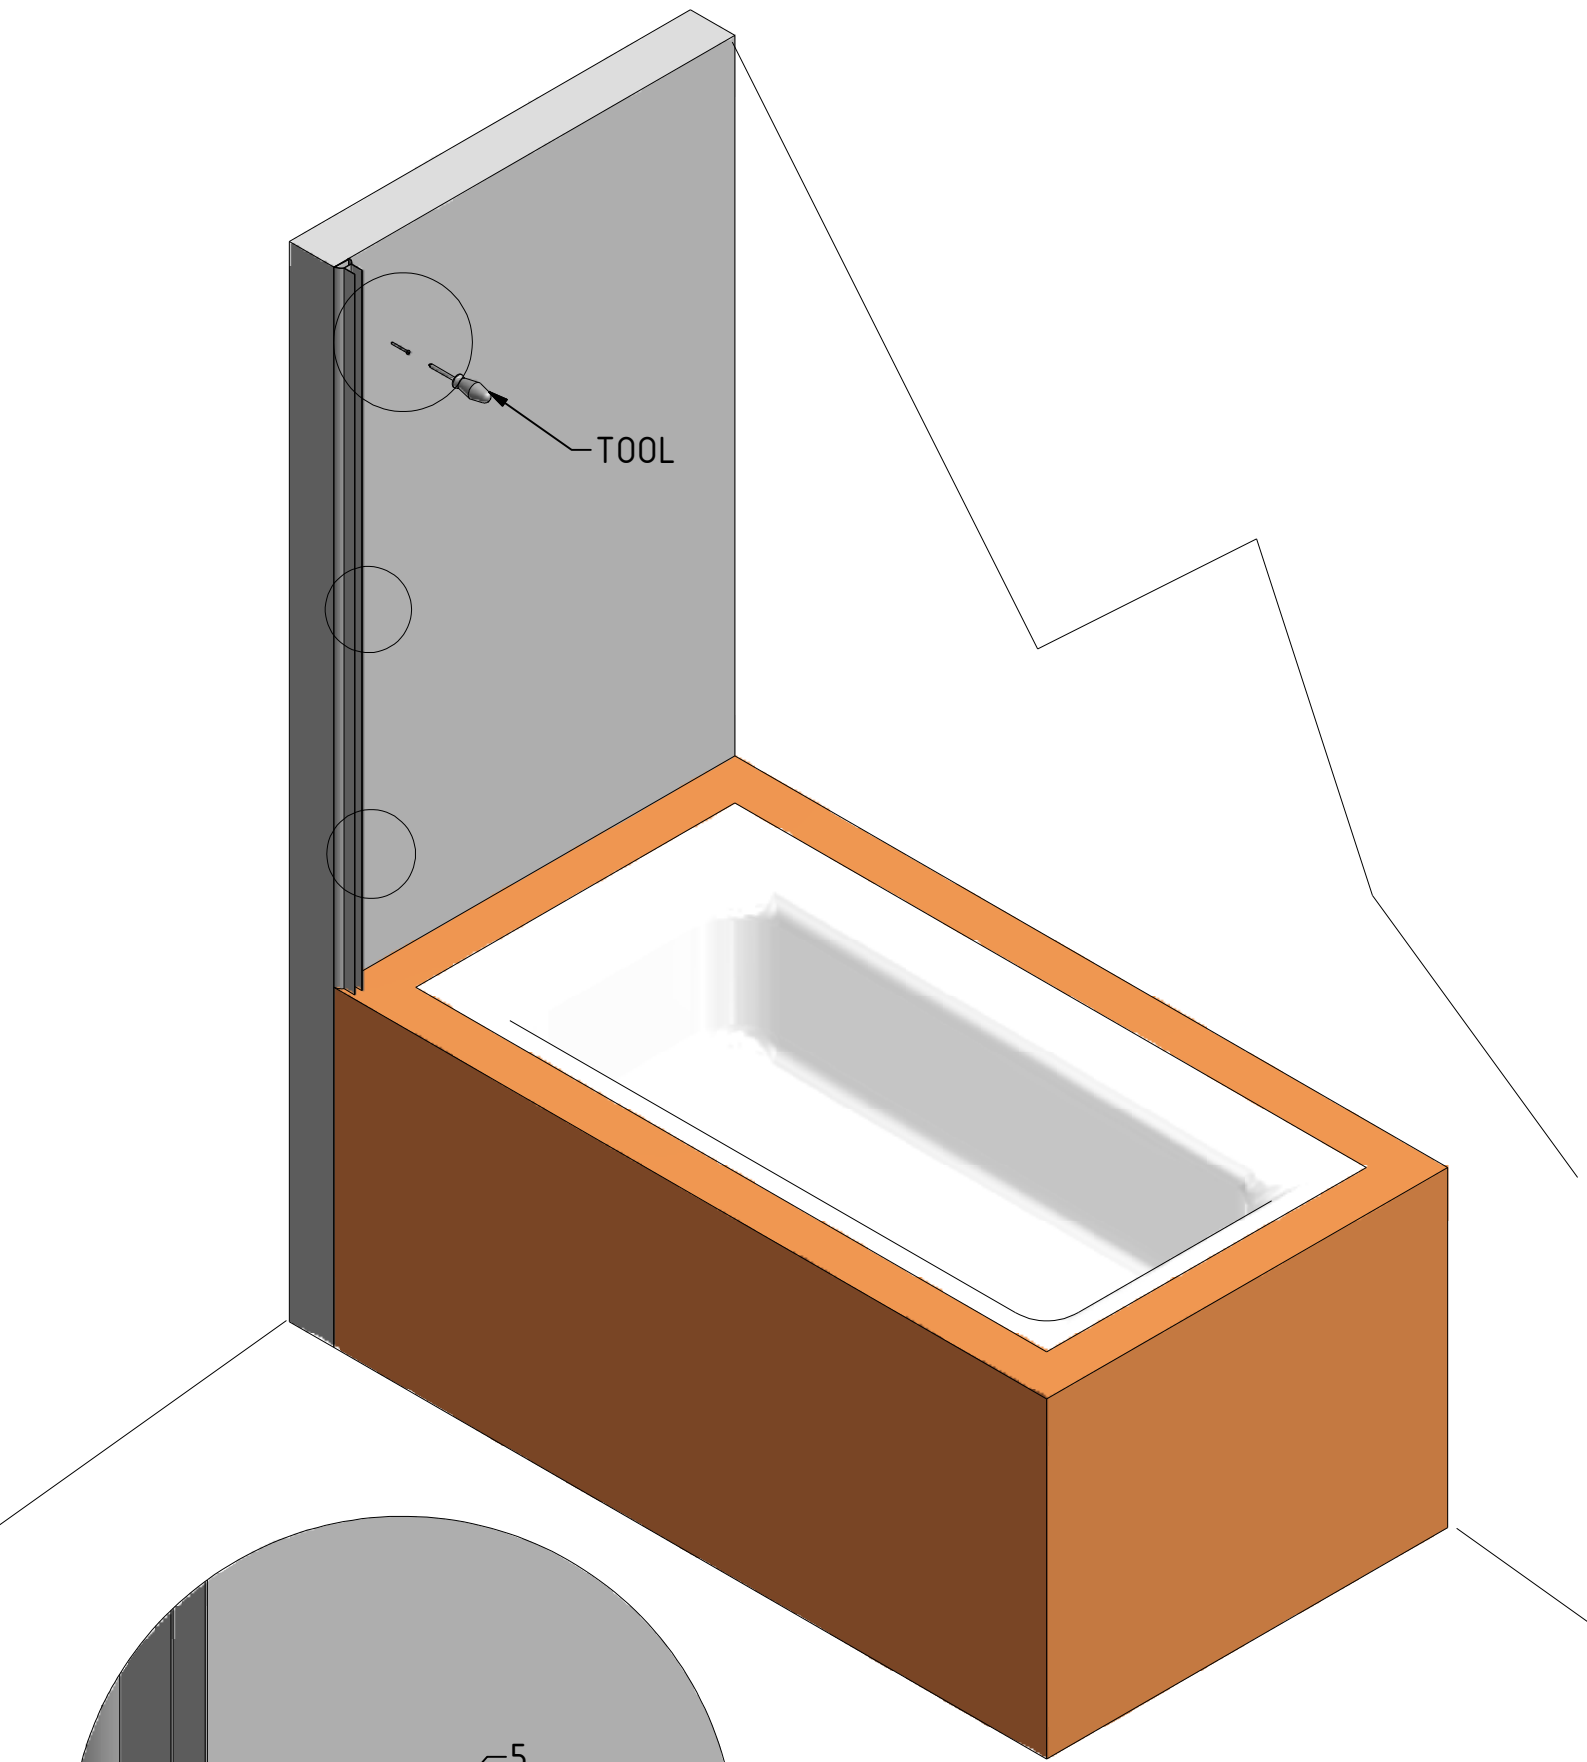


E 3x

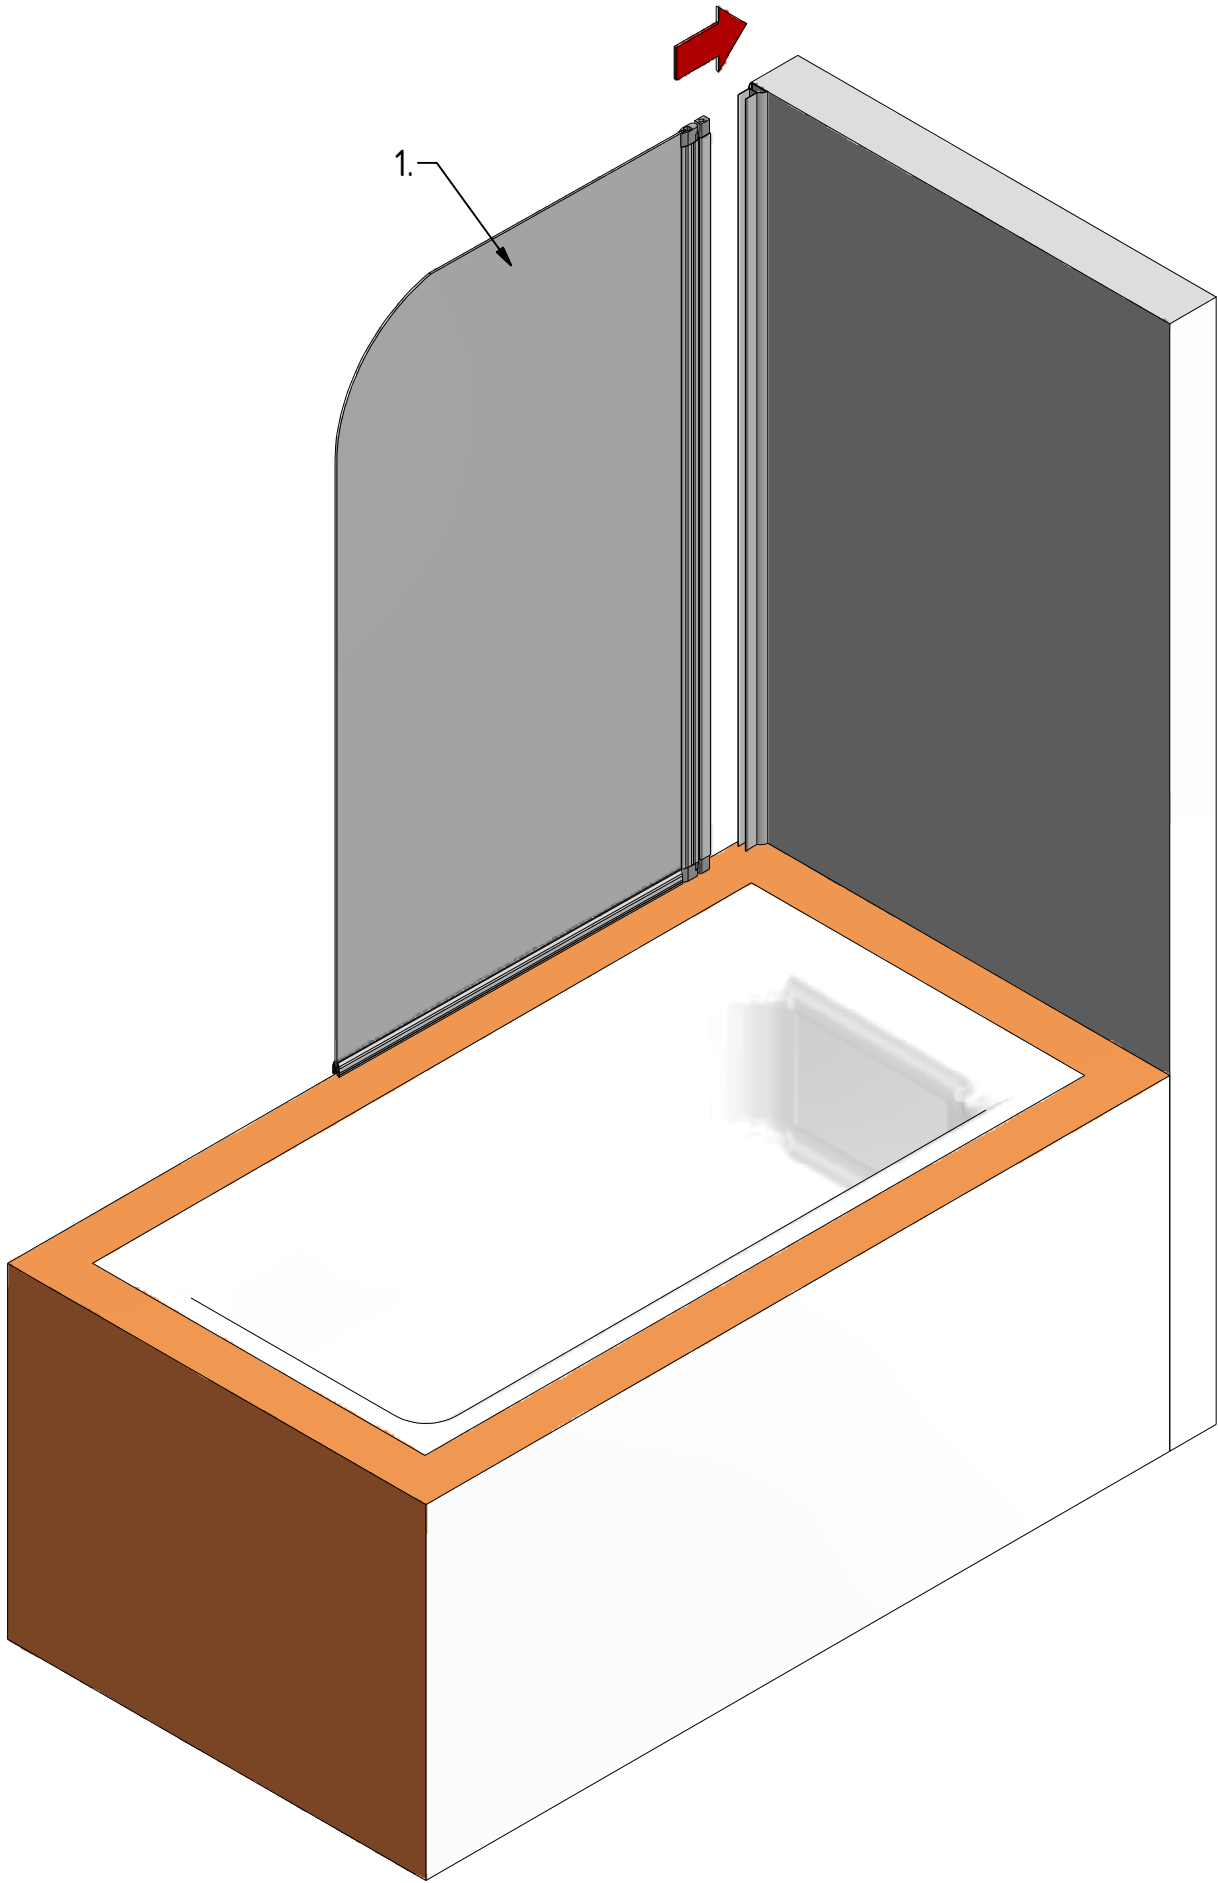



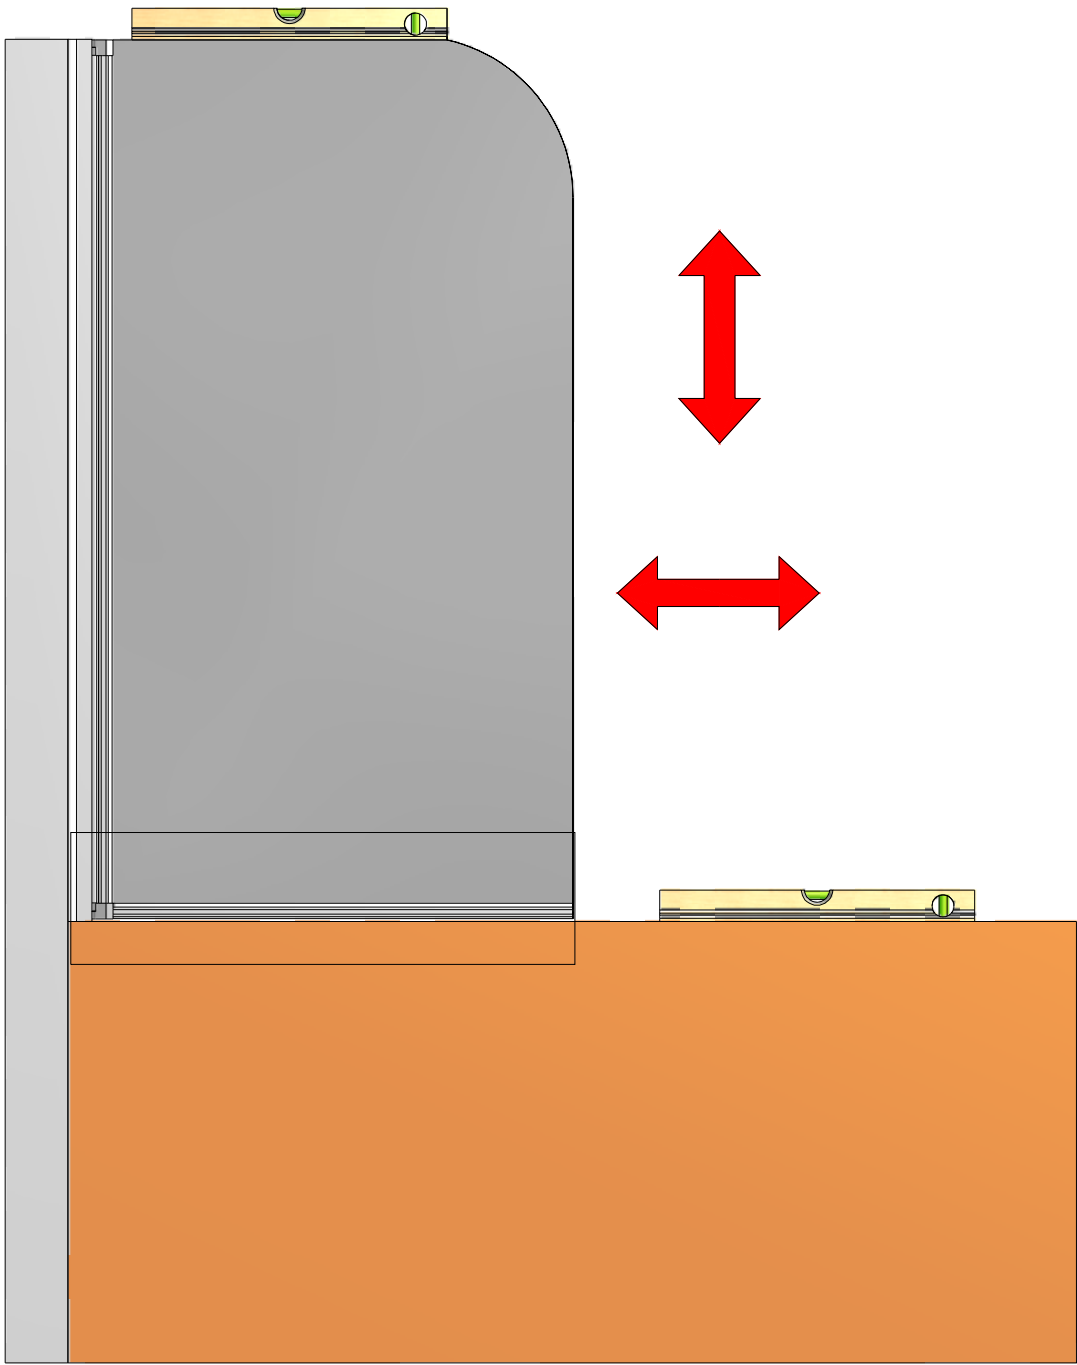


F

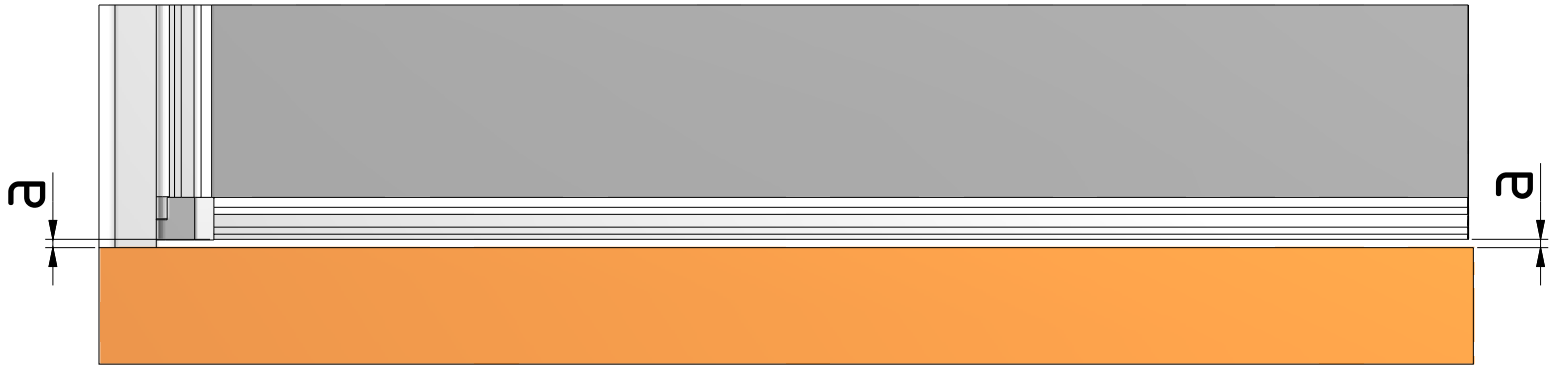


$a = \sim 3-5 \text{ mm}$


G 3x

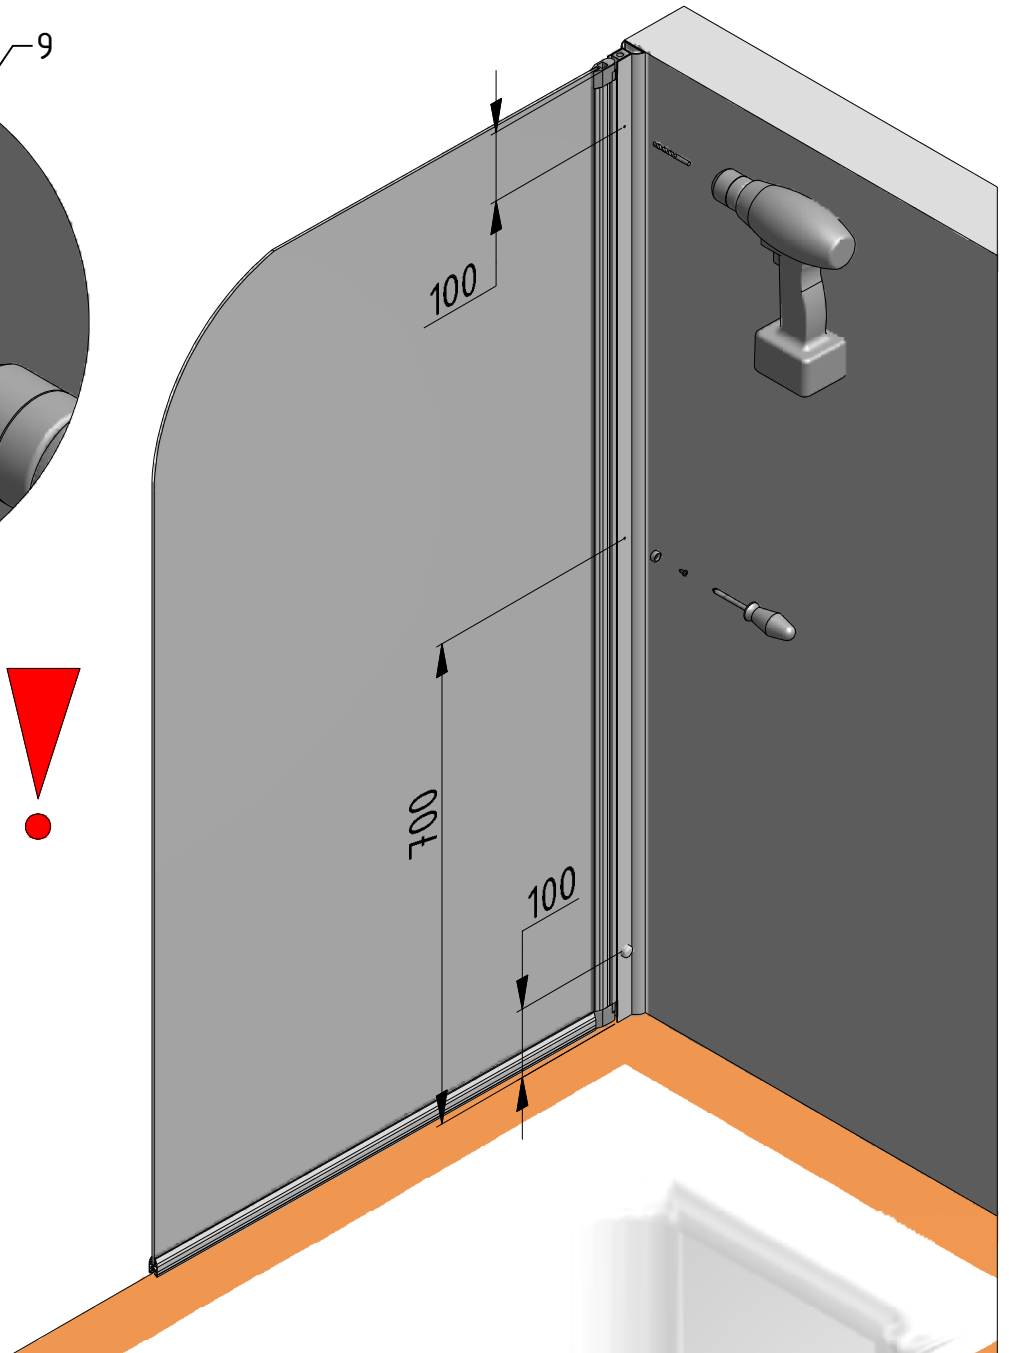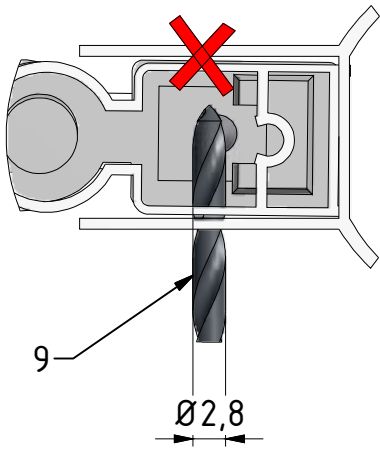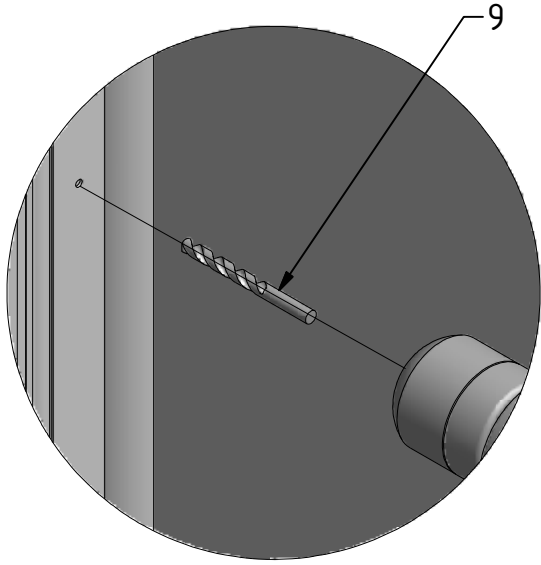


H 3x




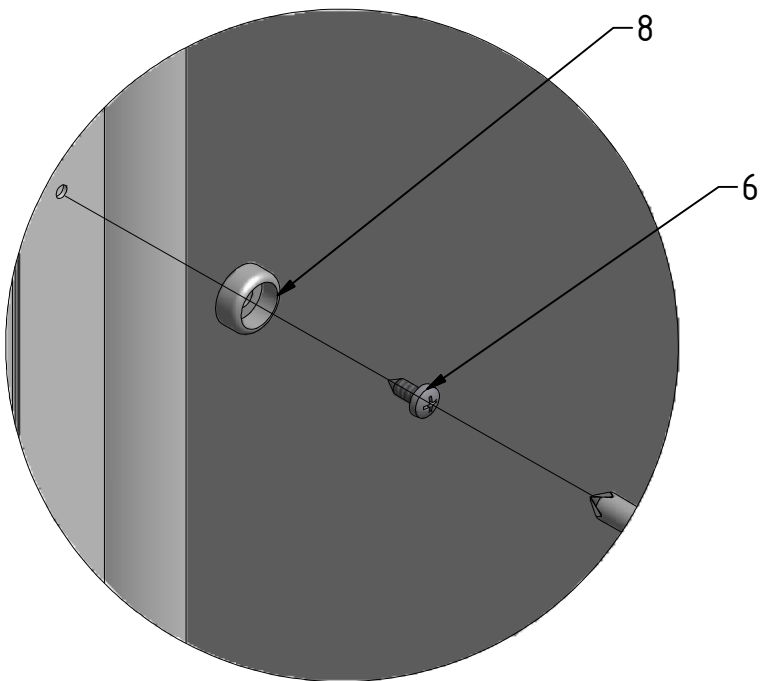



I 3x

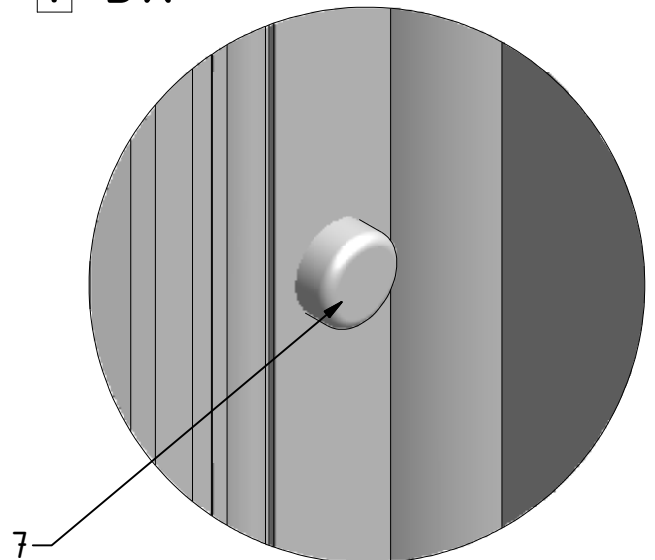

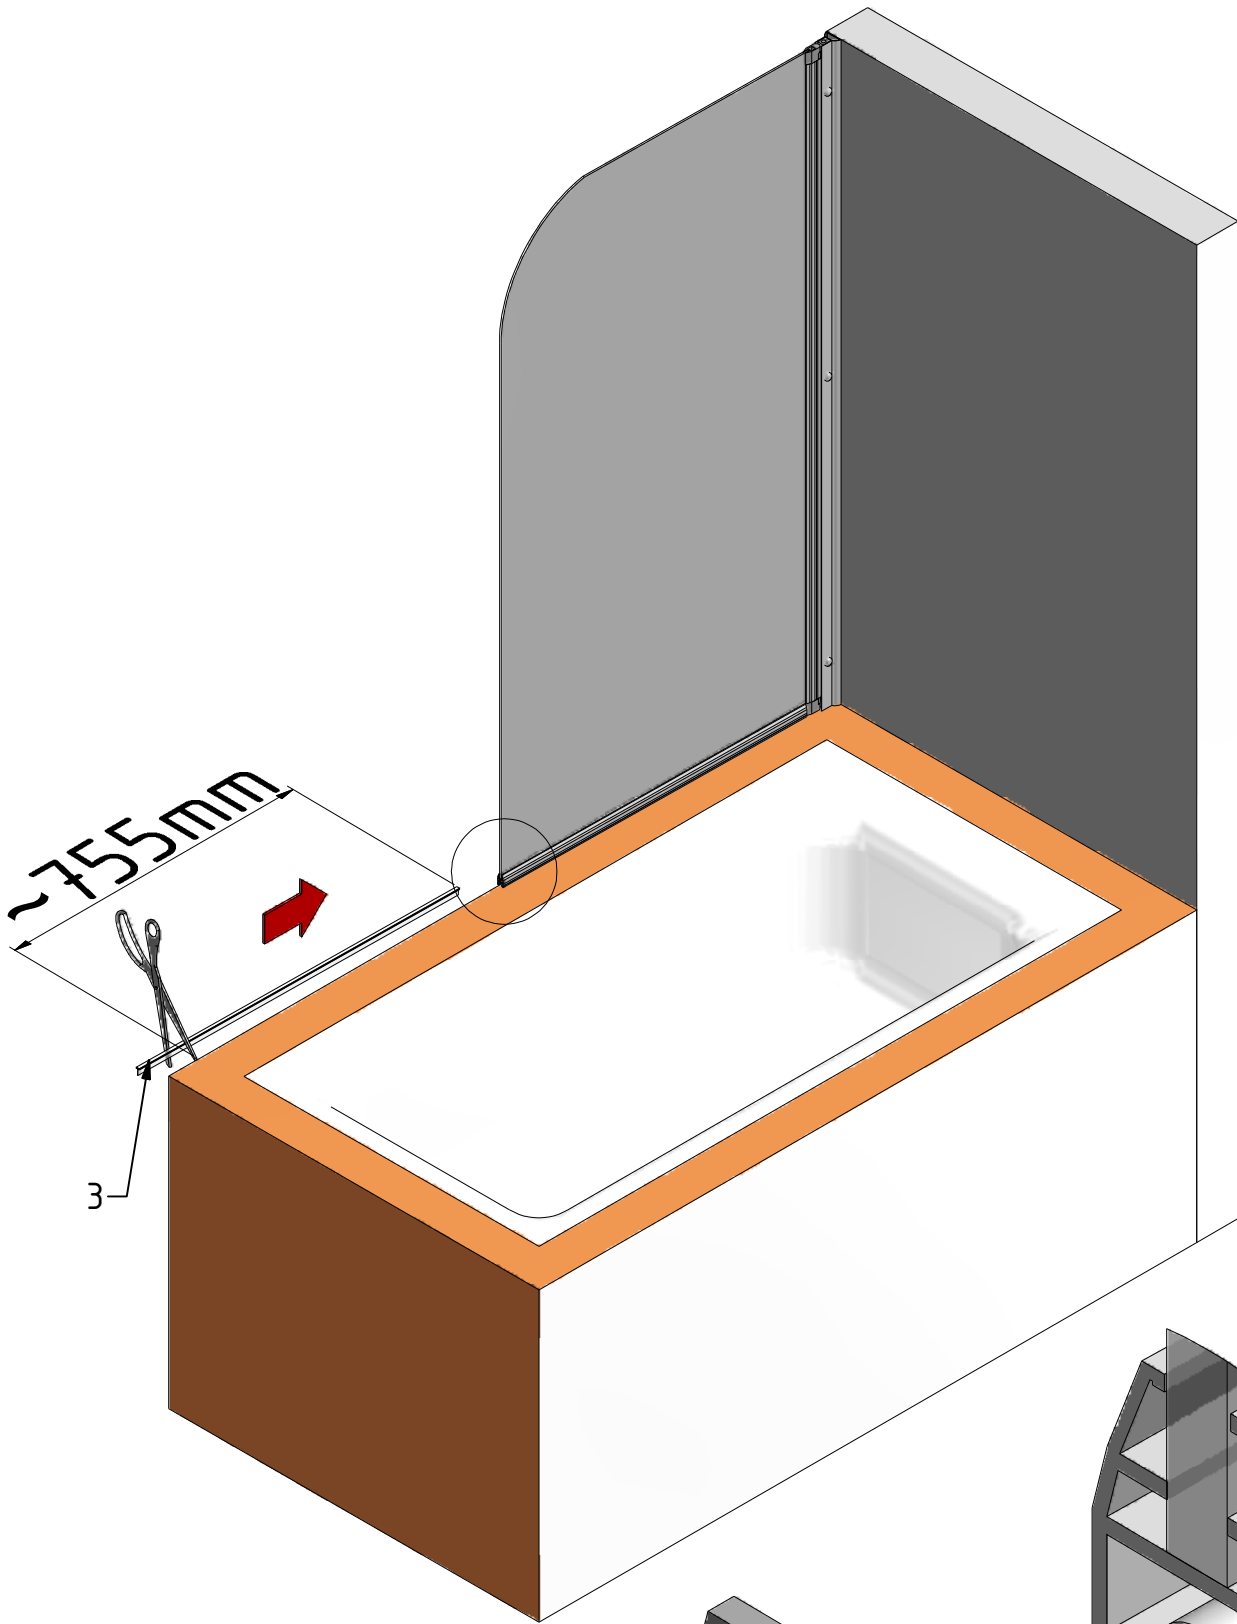

J

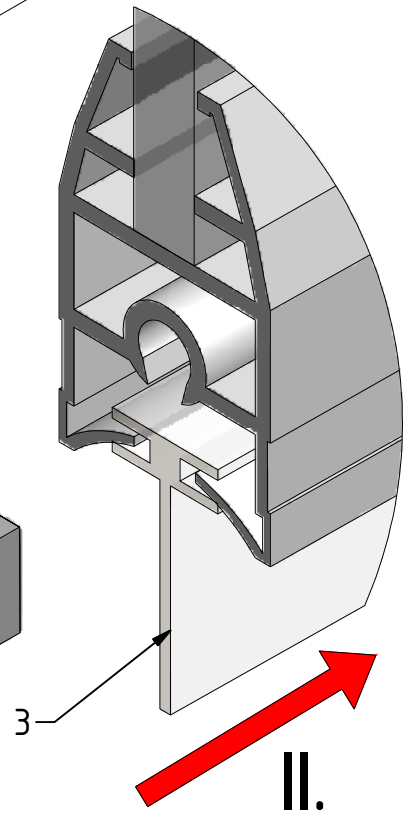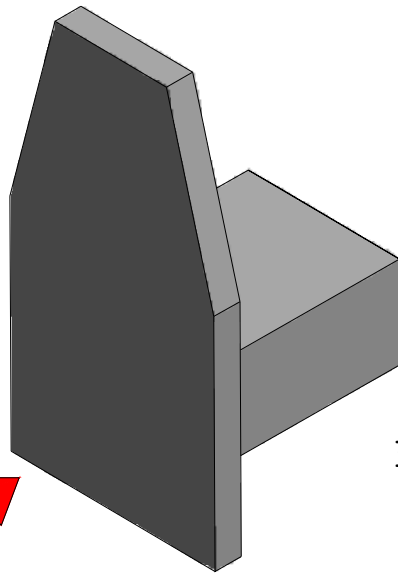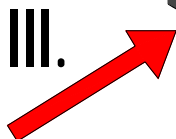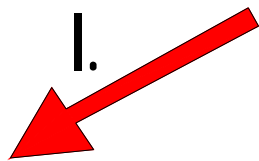

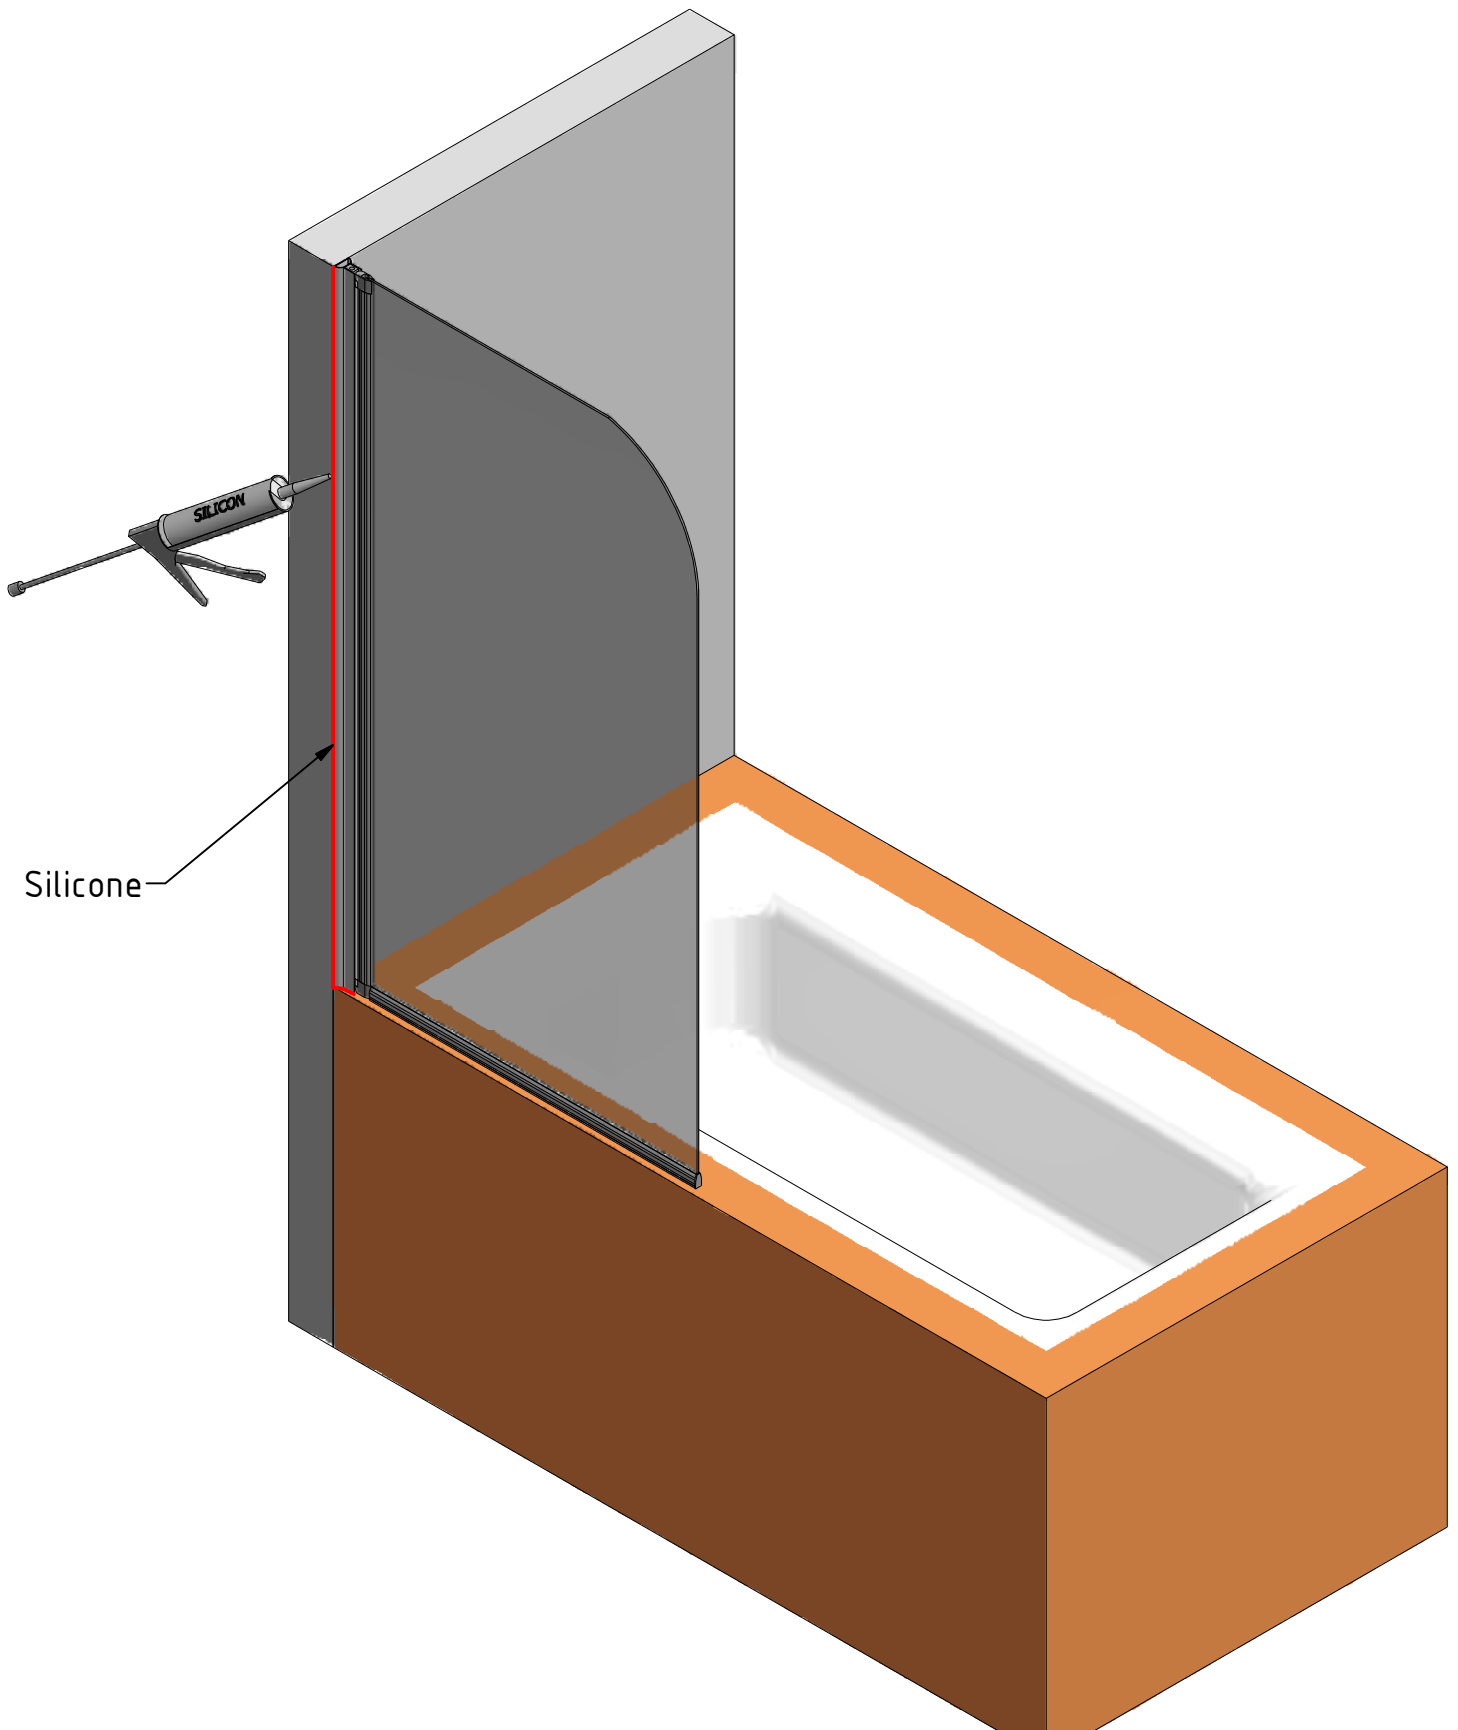

Silicone

